

## SAMPLE MEDIA PACK

CONTAINS FIVE SHEETS OF EACH PAPER TYPE FOR USE  
WITH EPSON STYLUS® PHOTO INK JET PRINTERS



### PREMIUM GLOSSY PHOTO PAPER: S041286


- Print high quality photos for glass frames, photo albums, and enlargements
- Smudge and water resistant, quick dry surface
- Ultra smooth, bright white, heavyweight paper
- Perfect for enlargements of cherished photos



### BORDERLESS GLOSSY PHOTO PAPER: S041727\*

- Ultra smooth, bright white, heavyweight paper for brilliant snapshots
- Smudge and water resistant, quick dry surface
- True, edge-to-edge 4"x 6" photos – no trimming necessary

\* Compatible with Epson Stylus Photo 780/785EPX/820/825/890/900/925/960/1280/2200 and Epson Stylus CX3200 printers

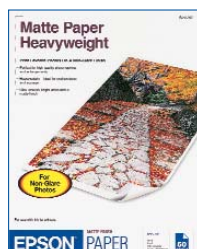

### MATTE PAPER — HEAVYWEIGHT: S041257

- Perfect for high quality photo reprints and enlargements
- Heavyweight – ideal for craft projects and signage
- Ultra smooth, bright white with a matte finish
- Ideal for non-glare photos



### PREMIUM SEMIGLOSS PHOTO PAPER: S041331

- Semigloss surface provides professional-looking results
- Quick drying for easy handling
- Optimum photographic output
- Perfect for reprints and enlargements

For additional paper sizes and packs,  
log on to [www.epson.com](http://www.epson.com)

## Epson Papers

Genuine Epson papers and inks have been engineered to give you amazing Photo Quality images from your Epson ink jet printer. The special coating on the paper allows for high resolution printing and prevents bleeding and over-saturation for accurate, sharper and more vivid results. Epson offers a variety of coated papers to meet various application and printing needs.

For best results, keep your prints indoors and away from sunlight.

Epson is always adding new papers. Call your local sales representative for information on these products and more.

U.S.A. and Canada 1-800-463-7766

Latin America 1-305-265-0092

Or visit our website at [www.epson.com/get paper](http://www.epson.com/get paper)

Since all dyes, pigments and papers change over time, Epson does not warrant this product against color changes and fading. Epson's liability for any defects in manufacturing and packaging is limited to the retail cost of this product. Specifications are subject to change without notice. ColorLife is a trademark of Epson America, Inc. Epson and Epson Stylus are registered trademarks of Seiko Epson Corporation. © 2003 Epson America, Inc., CPD-16776 9/03

## Epson Paper Usage Guide

Product Name	Finish	Thickness	Uses
<b>Glossy Papers</b>			
Premium Glossy Photo Paper	High Gloss	10.4 mil	Enlargements and framing of cherished photos
Glossy Photo Paper	Glossy	9.4 mil	Reprints and everyday photos
Photo Quality Glossy Film	High Gloss	5 mil	Report covers with photos
Photo Quality Glossy Paper	Glossy	6.7 mil	Presentations and flyers with photos
ColorLife™ Photo Paper	Semigloss	10 mil	Perfect for long lasting enlargements and reprints
<b>Matte Papers</b>			
Matte Paper Heavyweight	Matte	9 mil	Enlargements and framing of cherished photos
Photo Quality Ink Jet Paper	Matte	4.9 mil	Presentation and newsletters with photos
High Quality Ink Jet Paper	Matte	4.7 mil	Web printing or presentations with graphics
Premium Bright White Paper	Matte	4.3 mil	Printing web pages, e-mails and business documents
<b>Specialty Papers</b>			
Iron On Transfer Papers	n/a	n/a	Transfer photos or graphics onto fabric
Glossy Photo Greeting Cards	Glossy	9.4 mil	Personalize greeting cards using your photos
Photo Quality Self Adhesive Sheets	Matte	7.5 mil	Custom size and shape labels, gift tags and signs
Photo Stickers	Glossy	7.4 mil	Create stickers using photos and graphics
Photo Quality Ink Jet Cards	Matte	8.3 mil	Photo postcards, invitations and announcements

## Printer Driver Settings

### PREMIUM GLOSSY PHOTO PAPER

In your printer driver, select Premium Glossy Photo Paper as the Media Type setting. If the setting is not listed in your printer driver, select Photo Quality Glossy Film.

### PREMIUM BORDERLESS GLOSSY PHOTO PAPER

Select Premium Glossy Photo Paper as the Media Type setting. If the setting is not listed in your printer driver, select Photo Quality Glossy Film.

### MATTE PAPER — HEAVYWEIGHT

Select Matte Paper-Heavyweight. If Matte Paper — Heavyweight is not listed, select Photo Quality Ink Jet Paper. Only print on the printable (whiter) side. Do not print on the back side.

### PREMIUM SEMIGLOSS PHOTO PAPER

Select Premium Semigloss Photo Paper as the Media Type setting. If the setting is not listed in your printer driver, select Premium Glossy Photo Paper. Print on the glossy side of the paper. Do not print on the non-printable side. Doing so may cause the ink to smudge inside the printer. Do not fold or flatten any curling to avoid cracking. If you are printing more than two sheets, remove each printout from the printer immediately after printing.

# EPSON®

Epson America, Inc.

3840 Kilroy Airport Way, Long Beach, CA 90806

Epson Canada, Ltd.

3771 Victoria Park Avenue, Toronto, Ontario M1W 3Z5



For fun creative projects and ideas, check out the EPSON Print Lab Series at [www.printlabseries.com](http://www.printlabseries.com)



Check out Epson's photo sharing website at [www.photo.epson.com](http://www.photo.epson.com)



Epson guarantees the weight of these media. If you use plain paper from another source, check that it matches the weight requirements for plain paper stated in your printer's manual.